

VR Series

Vive Trackers

The VR Carts with the Vive Pro headsets are available for you to use for studio and class work. Please make sure to review this guide fully to learn about how to properly use these systems.

[Section 1 - Storage, Mask & Cleaning](#)


[Section 2 - Login & File Access](#)

[Section 3 - Vive Pro Eye Headsets](#)

[Section 4 - Vive Pro Eye Headset Wireless](#)

[Section 5 - Steam VR](#)

[Appendix](#)

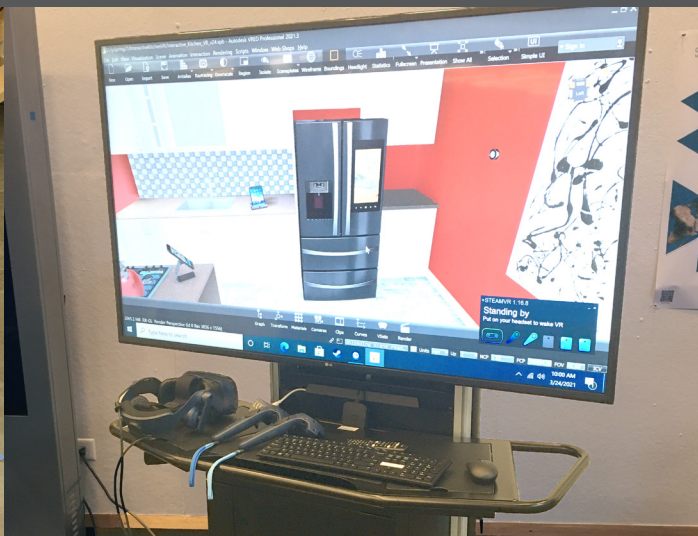

Vive Trackers

There are three VR carts located on the 2nd floor atrium. Two of them have Vive Pro Eye headsets while the third headset is just a Vive Pro with wireless option. All three systems use the Base Stations 2.0, which are located overhead.

There are also Trackers available to use with each Vive system. These can be attached to the body or physical objects to help enhance the immersion experience. If not using the trackers, make sure they are power off, otherwise they may show up in your scene by accident.

***Note:** You can start with any cart since it will power on the base stations automatically when Steam VR is started. However, the opposite is true. When exiting Steam VR, it will power down the base stations so they do not stay running. If multiple carts are being used, other carts may have to restart Steam VR to power the base stations back on.*


When using all the systems, please follow social distancing guidelines, use a VR mask along with regular mask and clean the VR headset and controllers after use or swapping out with another user. Also, have a VR buddy so they can hand you the controllers and place you in the physical space so you do not accidentally hit equipment or somebody else!



VR Series

Using the VR Carts

Section 1 - Storage, Mask & Cleaning

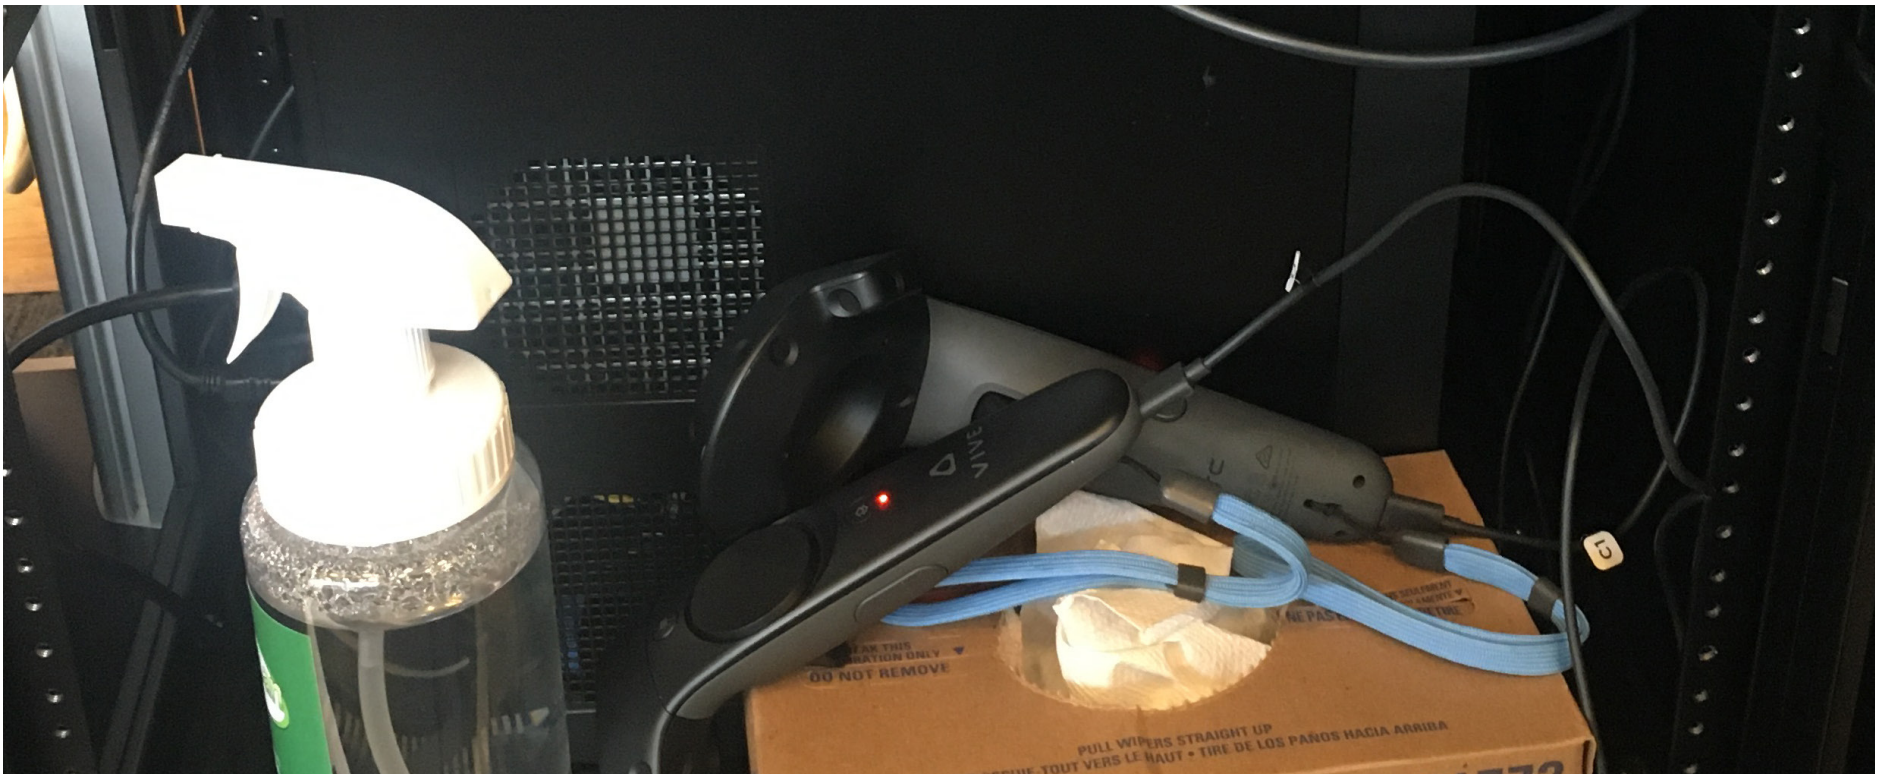

VR Cart - Storage

When finish, store the headset, controllers, and trackers back into the cart's cabinet. To helpout other students, make sure to plug in the controllers, trackers and wireless power block to recharge. If you used your personal account for Steam and eduroam, log off of them and make sure to logoff the local account.



VR Cart - Mask

As extra precaution, use a VR mask with a regular face mask when using the VR headset. These should be located in the shelf's storage compartment on the right side.

